

## Jmpr Mini-L™ User Manual

### Specifications

Model: JR1700GYLI  
 Battery Cell: Lithium-ion Polymer  
 Total Output Power: 5V/1040mAh (5.2Wh)  
 Battery Capacity: Li-Polymer 3.7V/1700mAh (6.29Wh)  
 Recharging Cycle: 500 cycles  
 Input: DC 5V/500mA  
 Output: DC 5V/1000mA MAX  
 Weight: 0.13lb (60g)  
 Dimension: 3.54 x 2.28 x 0.31 inch (90 x 58 x 7.9 mm)  
 Operating temperature: 32°F~104°F(0°C~40°C)  
 Storage temperature: 14°F~122°F(-10°C~50°C)

### How to Charge

Charge the Jmpr Mini lightning with a micro USB cable from any associated power source. During charging the Battery Status Indicator will flash. Once charged, four solid LED lights will indicate the Jmpr Mini is fully charged.


(If the Jmpr Slate 5K doesn't begin charging your device immediately, please make sure the Slate is charged before reconnecting)

### Charge your devices

Connect your electronic devices using the Jmpr Mini Lightning's Tethered Lightning Charging Cable. (If the Jmpr Mini Lightning doesn't begin charging your device immediately, please make sure it is charged before reconnecting). \*Some devices will require the user to press the power/battery indicator button to begin charging your device

### Stack n' Charge

Jmpr Mini Lightning comes with Stack n' Charge function.

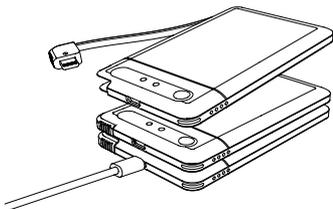

You can stack the Jmpr Mini Lightning by aligning the Charging Pins over the Magnetic Charging Connectors to charge multiple Jmpr Mini Lightnings. All stacks will charge simultaneously.


### NOTES:

 1. When the Jmpr Mini Lightning starts charging, the Battery Status Indicator starts blinking.
2. The Jmpr Mini Lightning must be stacked in the same direction to receive charge.

### Battery Status Indication

The Indicator status while being charged

- Indicator is on
- Indicator is off
- ※ Indicator is blinking



Battery remaining while Jmpr Mini Lightning is being charged

Battery Status Indicator	Battery Level
※○○○	0%~25%
●※○○	25%~50%
●●※○	50%~75%
●●●※	Over 75%
●●●●	100%

Battery remaining while Jmpr Mini Lightning is charging the other device

Battery Status Indicator	Battery Level
※○○○(blinking every second)	0%~3%
※○○○(blinking every 5 seconds)	3%~25%
※※○○	25%~50%
※※※○	50%~75%
※※※※	75%~100%

### Important Notes

1. If the Jmpr Mini Lightning detects the output exceeds the limit, it will automatically switch to stand by mode and then the Battery Status Indicator will flash for 10 seconds. Unplug the Jmpr Mini Lightning from the device and plug back in to resume the charging.
2. When the Jmpr Mini Lightning is out of power, the Battery Status Indicator will flash for 5 seconds and then power off.
3. If the Jmpr Mini Lightning is not used for more than one month, it will need to be charged to 85% before using. Re-charge every 6 months when not in use.
4. It is normal for the back panel of Jmpr Mini Lightning to become slightly warm while charging your device.
5. The Jmpr Mini Lightning contains multiple magnets, please keep a safe distance from the magnetism-sensitive products, such as credit cards, pacemakers etc.

Other EnerPlex Gear: see the latest at [www.goenerplex.com](http://www.goenerplex.com)

### Warranty:

1 year limited Warranty  
 Please refer to [goenerplex.com](http://goenerplex.com) for more information